
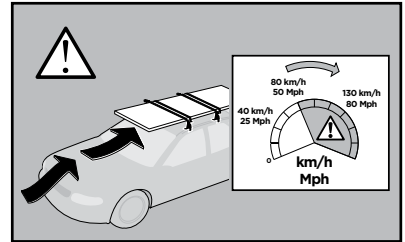
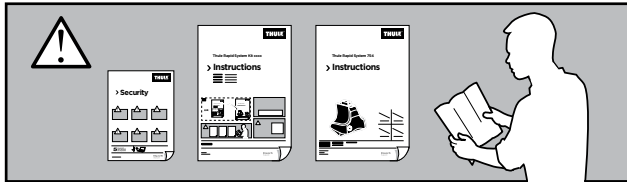
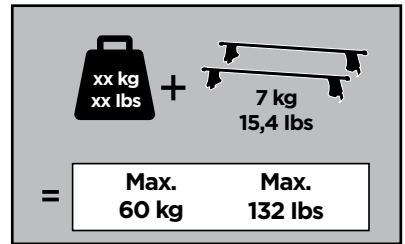


# Thule Rapid System Kit 1405

# > Instructions

**TOYOTA Avensis**, 4-dr Sedan, 03-08

**TOYOTA Avensis**, 5-dr Hatchback, 03-08

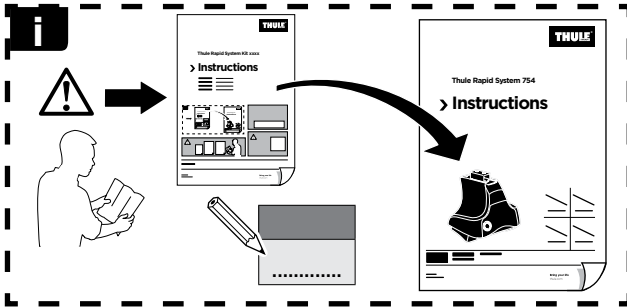

ISO 11154-E


**141405**

C.20120920  
519-1405-01

**Bring your life**  
thule.com



235 x1



236 x1

237 x1

238 x1




785 x2



786 x2






x1



x1

# 1

	X (scale)	X (mm)	X (inch)
<b>TOYOTA Avensis, 4-dr Sedan, 03-08</b>	<b>31,5</b>	<b>966</b>	<b>38</b>
<b>TOYOTA Avensis, 5-dr Hatchback, 03-08</b>	<b>31,5</b>	<b>966</b>	<b>38</b>

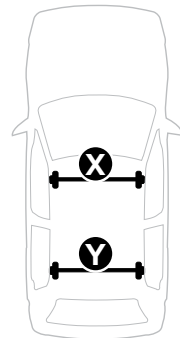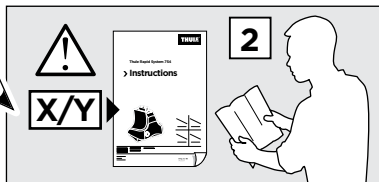
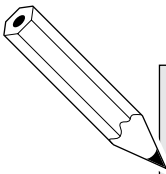



	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Avensis, 4-dr Sedan, 03-08</b>	<b>27,5</b>	<b>926</b>	<b>36 1/2</b>
<b>TOYOTA Avensis, 5-dr Hatchback, 03-08</b>	<b>28</b>	<b>931</b>	<b>36 5/8</b>

**2**

**TOYOTA Avensis, 4-dr Sedan, 03-08**

**TOYOTA Avensis, 5-dr Hatchback, 03-08**

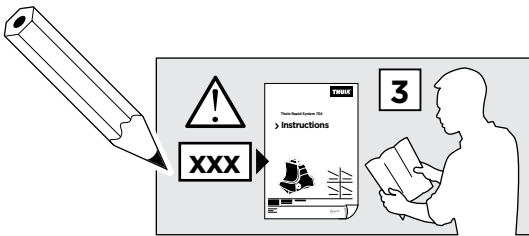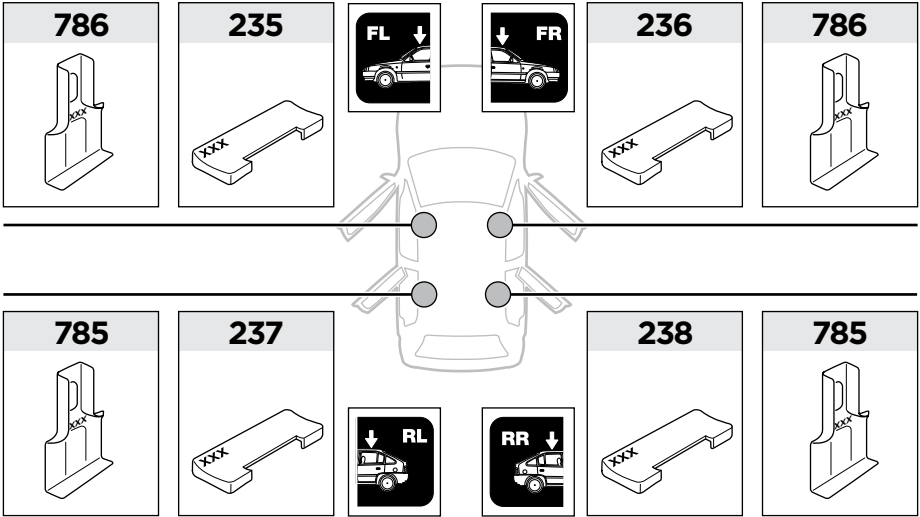

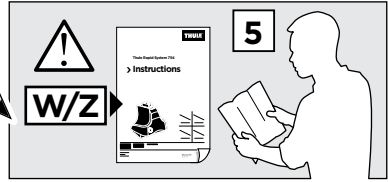**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Avensis</b> , 4-dr Sedan, 03-08	<b>200</b>	<b>720</b>	<b>7 <sup>7</sup>/<sub>8</sub></b>	<b>28 <sup>3</sup>/<sub>8</sub></b>
<b>TOYOTA Avensis</b> , 5-dr Hatchback, 03-08	<b>200</b>	<b>720</b>	<b>7 <sup>7</sup>/<sub>8</sub></b>	<b>28 <sup>3</sup>/<sub>8</sub></b>

