


# Thule Rapid System Kit 1603

# > Instructions


HYUNDAI Santa Fe, 5-dr SUV, 10-12

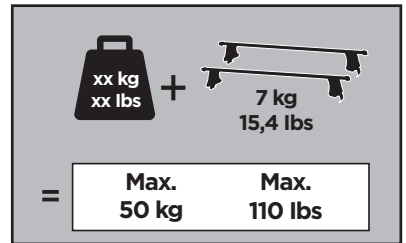

ISO 11154-E




124 x4



990 x4





x1



x1

1


	X (scale)	X (mm)	X (inch)
HYUNDAI Santa Fe, 5-dr SUV, 10-12	45,5	1106	43 1/2

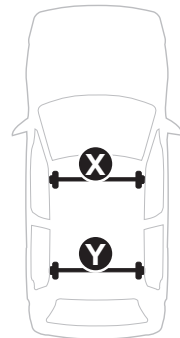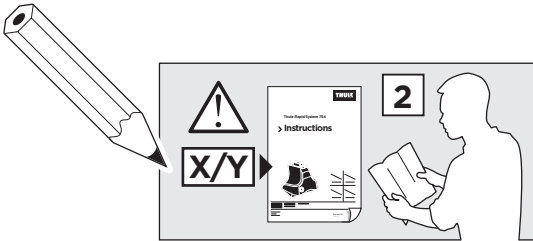


	Y (scale)	Y (mm)	Y (inch)
HYUNDAI Santa Fe, 5-dr SUV, 10-12	46	1111	43 3/4

**2**

**HYUNDAI Santa Fe**, 5-dr SUV, 10-12

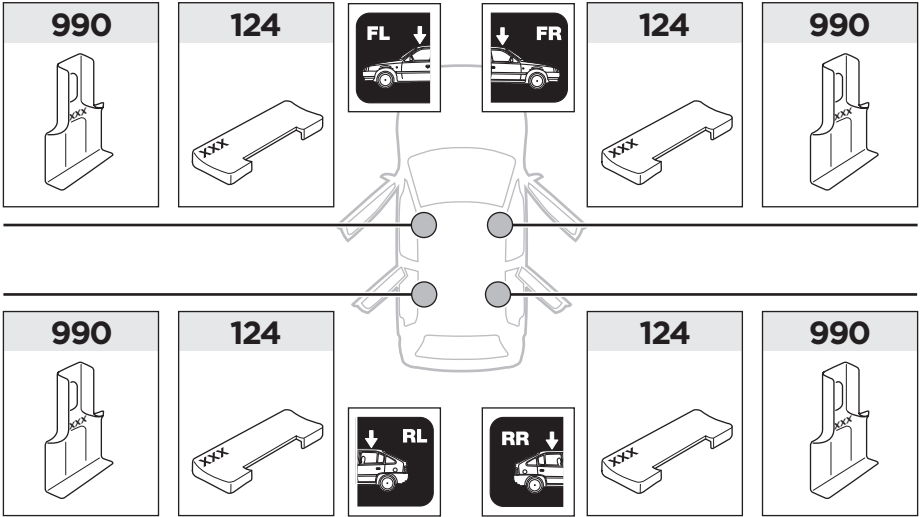

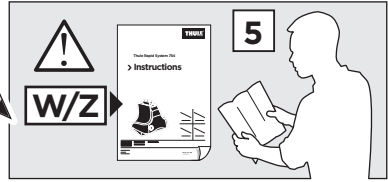**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HYUNDAI Santa Fe</b> , 5-dr SUV, 10-12	<b>340</b>	<b>700</b>	<b>13 <sup>3</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

